ARAT Navigation mount

Car Manufacturer: MERCEDES

TYPE: W 140

Part No: NS1006.2

ARAT GmbH
Spezialhalterungen
für Autotelefone u. -Navigationssysteme
...the world of communication

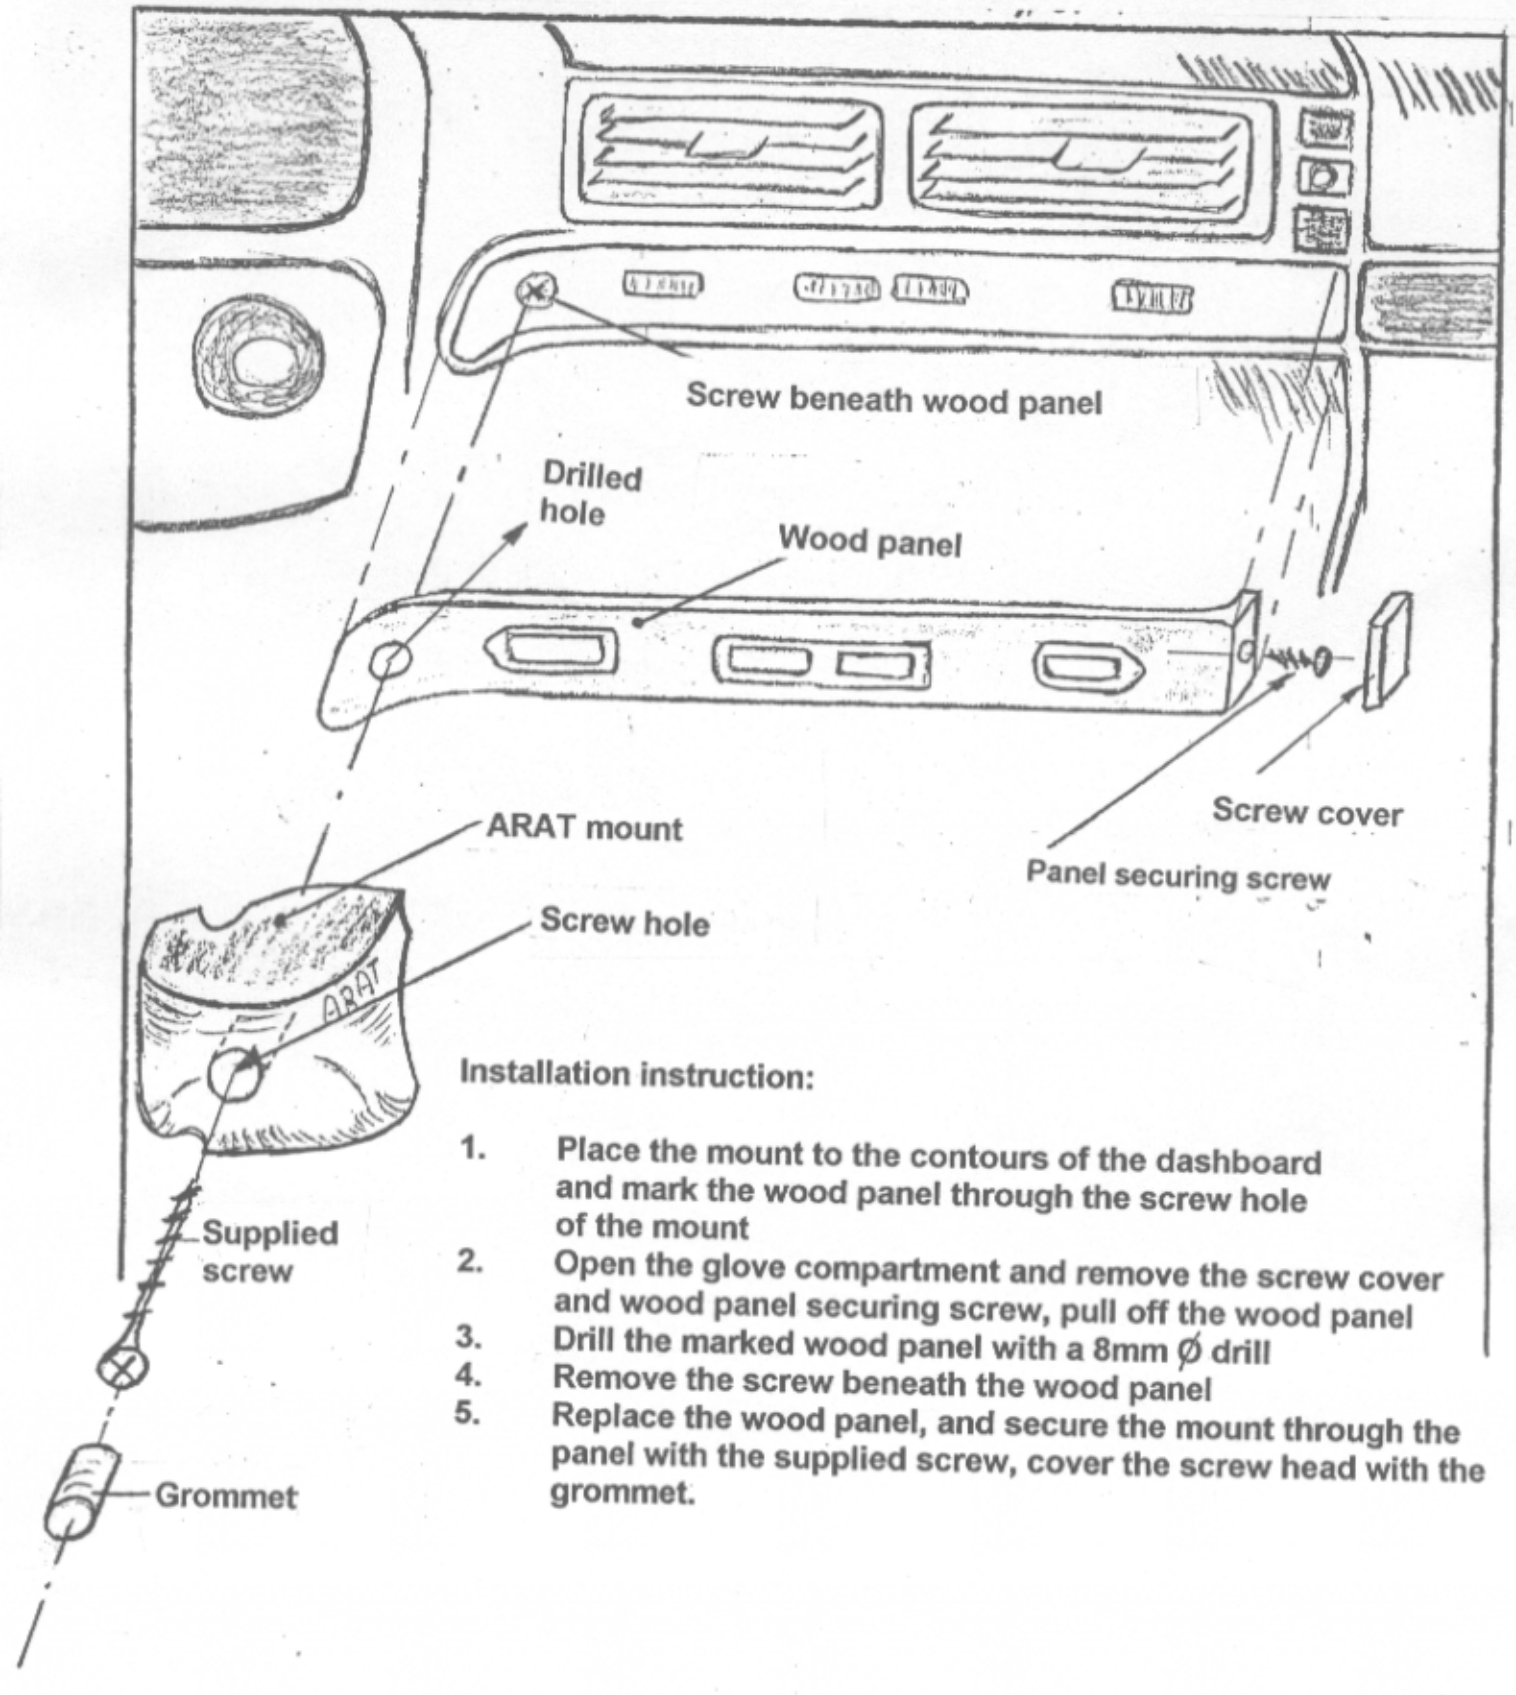

Installation instruction:

1. Place the mount to the contours of the dashboard and mark the wood panel through the screw hole of the mount
2. Open the glove compartment and remove the screw cover and wood panel securing screw, pull off the wood panel
3. Drill the marked wood panel with a 8mm Ø drill
4. Remove the screw beneath the wood panel
5. Replace the wood panel, and secure the mount through the panel with the supplied screw, cover the screw head with the grommet.